STL- 2812 Natural Rubber Gloves


This product is a product that provides protection against high-grade hazards in accordance with the standards met and is designed to protect the user. It also protects against minimal risk factors whose consequences may not cause irreversible body injuries. Resistant to chemicals such as strong detergents, greases and solvents. It adapts to wet and dry conditions with its palm pattern. Thanks to its anatomical structure, it is comfortable and reduces hand fatigue.



Technical Specifications

Lining Material	Coton Lining
Sizes	6-6.5, 7-7.5, 8-8.5, 9-9.5, 10-10.5
Color	Black
Length / Thickness	310mm / 0.80mm
Box Amount	144 Pairs
Packaging	1 Pair
Category	CAT III
	EN 388:2016+A1:2018 (3111X)
Standards	EN ISO 374-5:2016
	EN ISO 374-1:2016 +A1:2018 (AKLMNOPT)
	EN ISO 21420: 2020

GLOVE TEXTURE and LINING MATERIAL ———

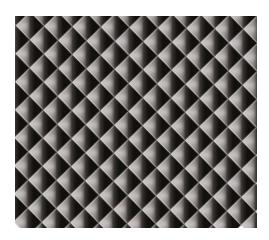



BAKLAVA DOKUSU

Eldivenin avuç içine uygulanan baklava dokusu sayesinde ıslak ve kuru yüzeylerde kaydırmazlık özelliği sunar. Doku sayesinde nesneler daha sağlam kavranabilir.



COTON LINING

Thanks to its cotton liner, it can be worn easily and provides comfortable usage. Minimizes hand sweats.

STANDARDS -

These gloves protect hands from irreversible or fatal risks as defined in the PPE Directive EU 2016/425. It is designed to protect. This product complies with EN ISO 21420: 2020 (General requirements and regulations for protective gloves) inspection methods, EN 388: 2016 (Protective against Mechanical Risks) and EN ISO 374-1: 2016, EN ISO 374-5: It has been subjected to 2016, EN 374-4:2019 (Protection Against Chemical Substances and Microorganisms) tests.

EN 388:2016 EN ISO 374-1:2016 EN ISO 374-5 EN ISO 21420









EN ISO 374-1:2016+A1:2018 CHEMICALS AND PROTECTION AGAINST MICROORGANISMS

Α	Methanol / Metanol	3	%7.2
K	Sodium Hydroxide 40% / Sodyum Hidroksit %40	6	-%15.4
L	Sulphuric Acid 96% / Sülfirik Asit %96	4	%25.0
М	Nitric Acid 65% / Nitrik Asit %65	6	%13.7
N	Acetic Acid 99% / Asetik Asit %99	4	%24.9
0	Ammonium Hydroxide 25% / Amonyum Hidroksit %25	3	-%33.8
Р	Hydrogen Peroxide 30% / Hidrojen Peroksit %30	6	%2.6
Т	Formaldehyde 37% / Formaldehit %37	6	%0.4



Areas of Use

















It is suitable for use in the manufacture of food products. In addition, it can be used in jobs that require resistance to chemicals in the pharmaceutical industry and laboratory work. It is a very suitable glove for people dealing with cement works in the construction sector. It can be used in the cleaning sector where there are risky chemicals.

— STANDARD REMARKS -

EN 388 Protective Gloves for Mechanical Risks

EN 388:2016 This standard covers features and test methods for protective gloves against mechanical risks such as abrasion, cutting, tearing, puncturing.

FEATURES:



Protective gloves conforming to this standard must meet all applicable properties of EN 420. The performance level of a protective glove against mechanical risks should be at a higher level for one of the attributes (wear, knife cutting, tearing, puncture and impact protection) that are classified according to the least features of each level shown in the table below. Note - Gloves that meet the specifications for puncture resistance may not be suitable for protection against sharp-pointed objects such as hypodermic needles.

The letter **X** means that the test has not been done or can not be performed.

PERFORMANCE LEVELS	1	2	3	4	5	
a - Abrasion resistance (number of cycles)	100	500	2000	8000	-	
b - Cut resistance (index)	1,2	2,5	5,0	10,0	20,0	
c - Tear resistance (N)	10	25	50	75	-	
d - Puncture resistance (N)	20	60	100	150	-	
PERFORMANCE LEVELS	Α	В	С	D	E	
e - Cut Resistance (N)	2	5	10	15	22	

PERFORMANCE LEVELS	А	В	C	D	E	Г
e - Cut Resistance (N)	2	5	10	15	22	30
f - Protection Against Impact	Pass (P) / Failed (No sign)					

EN ISO 21420 EN 420 General Specifications and Test Methods



This standard specifies the general requirements for the glove design and construction, protection against hazards, comfort, efficiency and marking and information applicable to all protective gloves. This standard also applies to arm protections. Many gloves designed for electrical technicians or the most private applications such as surgical operations are governed by private and strict standards.

GLOVE SIZE	Fits Hand Size	Hand Circumference / Length	Minimum Glove Length
6	6	152/160 mm	220 mm
7	7	178/171 mm	230 mm
8	8	203/182 mm	240 mm
9	9	229/192 mm	250 mm
10	10	254/204 mm	260 mm
11	11	279/215 mm	270 mm

^{*} For more detailed information on Standards, you can obtain EN European Glove Standards Guidelines from www.starlinesafety.com.

STANDARD REMARKS

EN ISO 374-1/Type A EN ISO 374-1/Type B EN ISO 374-1/Type C Marking of Protective Gloves from Chemicals







Type A and Type B gloves must be accompanied by coding letters under the "chemical resistant" pictogram shown on the side.

Gloves marked with Type C do not use the coding letter.

These coding letters refer to the list of chemicals

defined in the standard The minimum permeability time for type C gloves is 10 minutes for a chemical in the list. For Type B, 30 minutes for at least 3 chemicals and 30 minutes for Type A for at least 6 chemicals.

EN 374-4: 2013 New Distortion Test

After exposure to a chemical substance for a while, a new decay test was performed to measure the change in the physical properties of the glove. Fragmentation can be seen as swelling, flaking, discoloration, relaxation, hardening, softening or dimensional change. Tests according to EN 374-4: 2013 must be carried out for each requested chemical.

- Distortion test (deterioration of the physical properties of the gloves in contact with the chemical) according to EN 374-4: 2013.
- In order to be protective against chemicals in the list, it should be subjected to Penetration and Distortion tests.
- Distortion test results should be in the information brochure.

LIST OF CHEMICAL SUBSTANCES USED IN EXPERIMENT:

CODE	CHEMICAL MATTER	CAS NUMBER	CLASS
Α	Methanol	67-56-1	Primary Alcohol
В	Nail polish remover	67-64-1	ketones
С	Acetonitrile	75-05-8	Nitrile Compound
D	Dichloromethane	75-09-2	Chlorinated Paraffin
Е	Carbon Disulfide	75-15-0	Organic Compound Containing Sulfur
F	Toluene	108-88-3	Aromatic Hydrocarbon
G	Diethylamine	109-89-7	Amine
Н	Tetrahydrofuran	109-99-9	Heterocyclic And Ester Compound
I	Ethyl Acetate	141-78-6	Ester
J	n-Heptane	142-85-5	Saturated Hydrocarbon
K	Sodium Hydroxide, 40%	1310-73-2	Inorganic Base
L	Sulfuric Acid, 96%	7664-93-9	Inorganic Mineral Acid
М	Nitric acid 65%	7697-37-2	Inorganic mineral acid, oxidizing
N	Acetic acid 99%	64-19-7	Organic acid
0	Ammonia 25%	1336-21-6	Inorganic base
Р	Hydrogen peroxide 30%	7722-84-1	Peroxide
S	Hydrofluoric acid 40%	7664-39-3	Inorganic mineral acid
Т	Formaldehyde 37%	50-00-0	Aldehyde

EN ISO 374-5

EN ISO 374-5





EN 374 Protective Gloves Against Chemical Substances And Microorganisms

This standard specifies the ability of gloves to protect the user from chemicals and microorganisms.

Marking Of Protective Gloves Against Microorganisms

For gloves that are protective against bacteria and fungi, the

above-mentioned için biohazard pictogram mantar is applied. However, it is imperative that the glove be tested for leakage in accordance with EN374-2: 2013.

The biohazard pictogram for protection against bacteria, fungi and viruses is accompanied by the expression biyolojik VIRUS ina at the bottom. For this protective standard, it is essential that the glove is tested for bacteria and fungi in accordance with EN 374-2: 2013 and subjected to a bacteriophage penetration test in accordance with ISO 16604: 2004 (Method B).

— USER'S GUIDE —

Maintena

Maintenance and Cleaning

We recommend you to clean gloves by a normal detergent with 40-60°C of water with maximum of 3 times. After the washing, the performance may not be seen which it is featured in associated pictograms. It is the responsibility of user to control whether glove is suitable for intended use or not, whether it is complete or not and whether protective functions are undamaged or not. User should carry out an examination against potential defects which are likely to adversely affect protection functions (punctures, tears, damaged seams, etc.).



Service Life

Gloves should be used within three years as of the manufacture date. Service life of the gloves are affected by several factors such as cold, hot, chemicals, sunlight and inadvisable storage.



Storage

Storage is a part of the maintenance and cleaning but is often ignored. Protective gloves should be stored in their original packaging which will keep them away from direct sunlight, chemicals and abrasive materials and protect them against physical damages of the hard surfaces or materials not used or during shipment. Product should be stored in a dry and well-ventilated place. Availability

when it is not used or during shipment. Product should be stored in a dry and well-ventilated place. Availability of excessive humidity or intense light may adversely affect the product quality.

Order Information -

MODEL	Size	Barcode	Box Quantity	Box Dimension	Box Weight
STL-2812	7-7,5	8698547319901	144 Pairs	48 x 40 x 39cm	17,59 kg
STL-2812	8-8,5	8698547319321	144 Pairs	48 x 40 x 39cm	18,16 kg
STL-2812	9-9,5	8698547319338	144 Pairs	48 x 40 x 39cm	19,32 kg
STL-2812	10-10,5	8698547319345	144 Pairs	48 x 40 x 39cm	20,47 kg